


DRIVER / FAIRWAY LOFT SLEEVE SETTINGS

- Each click of the 4° Loft Sleeve increases or decreases loft by 0.5 - 0.75°
- Each click of the 4° Loft Sleeve increases or decreases face angle by 1.0 – 2.0°
- Each click of the 4° Loft Sleeve increases or decreases lie angle 0.5 – 0.75°

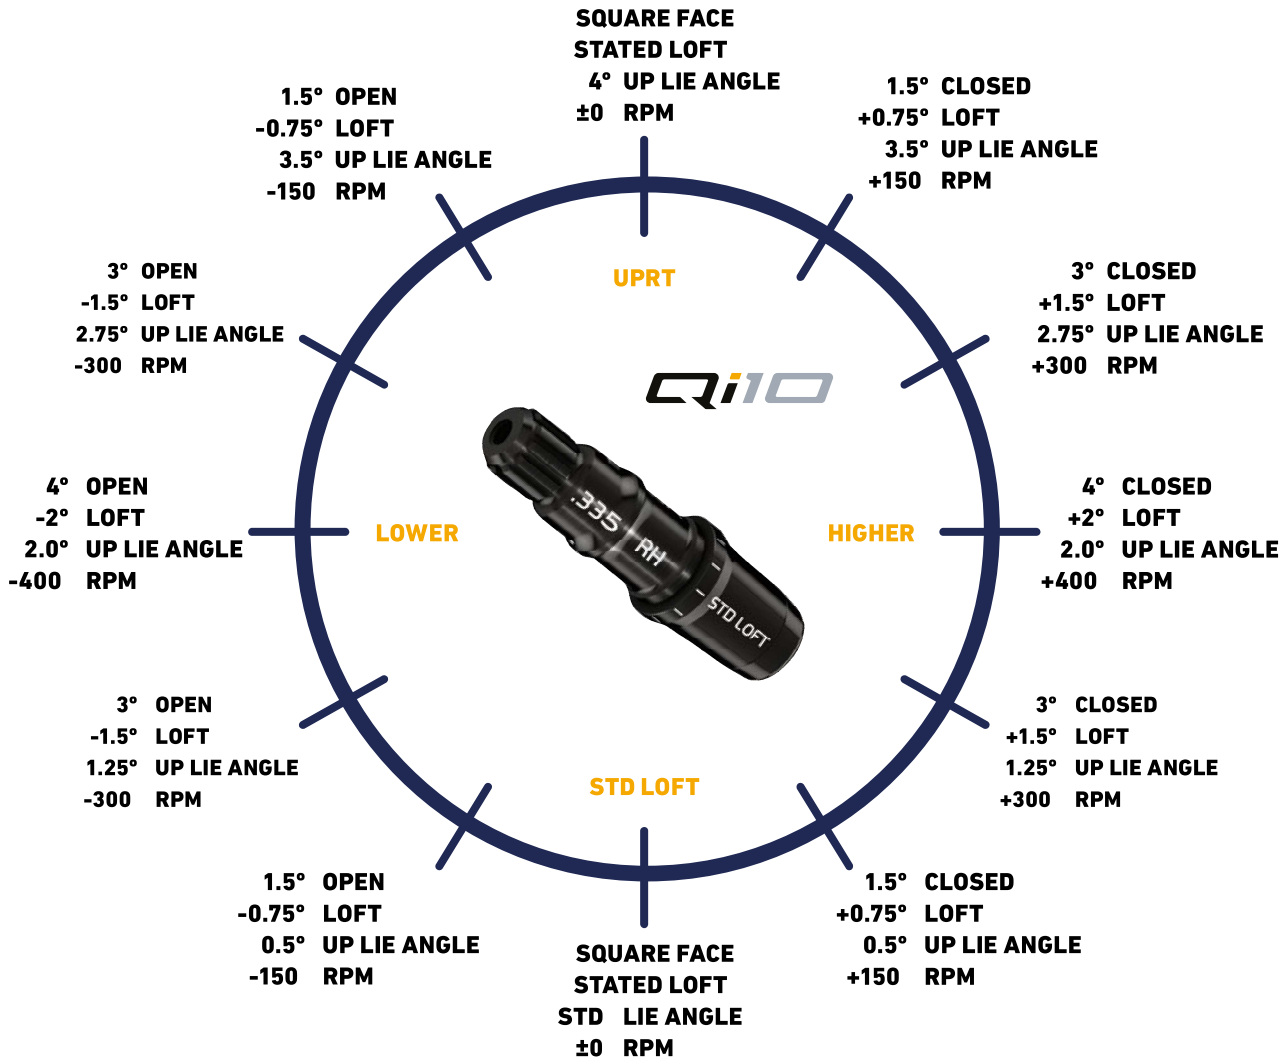

RESCUE LOFT SLEEVE SETTINGS

- Each click of the 1.5° Loft Sleeve increases or decreases loft 0.5°
- Each click of the 1.5° Loft Sleeve increases or decreases face angle 0.25° - 1°
- Each click of the 1.5° Loft Sleeve increases or decreases lie angle 0.5°

